



e-CONNECT Resource Centre

Call Toll Free:
1(800)695-2883

Inquiries:
info@aatel.com

www.aatel.com

M2.074030 Ver. D August 2007, Ascom Wireless Solutions, Sweden

Quick Reference Guide

Ascom i75 VoWiFi Handset





Communications ♦ Life Safety ♦ Security


e-CONNECT

Resource Centre

Call Toll Free:
1(800)695-2883

Inquiries:
info@aatel.com

www.aatel.com

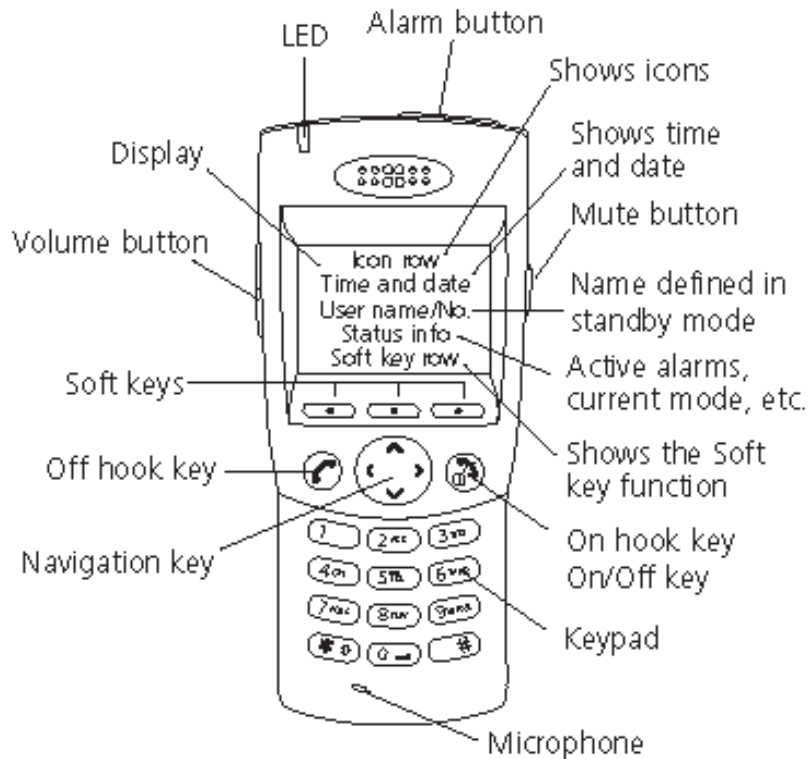

Display icons

- Off-hook (shows a call in progress)
- Audio signals off
- Battery icon
- Signal strength
- Loudspeaking function on/off
- Headset connected
- Text input mode; upper case/lower case
- Digit input mode
- Phonebook
- Locked keypad/Locked handset
- Not answered call
- Incoming/Outgoing call
- Unread/Read message
- Unread/Read interactive message
- Action required
- No-movement/Man-down alarm on



Communications ♦ Life Safety ♦ Security

e-CONNECT

Resource Centre

Call Toll Free:
1(800)695-2883

Inquiries:
info@aatel.com

www.aatel.com

Product presentation

GB

The Ascom i75 VoWiFi Handset is a robust unit designed to function in tough environments. The handset is suitable for users dependent on being reachable and/or having a need for mobile advanced messaging functions. The telephone is available in two versions, the Protector and the Medic Protector model.

For detailed information, see *User Manual, Ascom i75 VoWiFi Handset*.

Functions





Phonebook
Vibrator
Headset connector
Loudspeaking
Push to talk
In call soft key
Adjustable display contrast
Up to five rows in display
20 messages/20000 characters
Acknowledge
Interactive messaging
Text messaging between handsets
Data send
Personal alarm
Alarm with data
Location detection via Access Points
Man-down & No-movement alarm*
Supports Presence Management System

- Option

Basic operation

Make a call

Dialling can be made in the following ways:

- ♦ Dial the number and press .
- ♦ Press  and dial the number.
- ♦ Press a pre-programmed Hot key* or Soft key.
- ♦ Open the call list by pressing the Navigation key , select the number you want and press .
- ♦ *The alpha-numeric keys can be programmed with a telephone number.*



Communications ♦ Life Safety ♦ Security

Call Toll Free:
1(800)695-2883



Inquiries:
info@aatel.com

www.aatel.com


e-CONNECT Resource Centre

- ♦ Dial a number from the local phonebook.
See heading; *Use the local phonebook*
- ♦ Dial a number included in a message.
See heading; *Dial a number included in a message.*
- ♦ Dial a number from the central phonebook.
See heading; *Search in the central phonebook.*

Answer/End a call

When the ring signal sounds, press  or the "Accept" Soft key to answer. To end the call, press . The total call time is shown in the display.

Reject a call

When the ring signal sounds, press  or the "Decline" Soft key to reject the call. Call information will be stored in the "Call list".

Turn loudspeaking function on/off

During a call, press the middle Soft key to turn the loudspeaking function on/off.

Turn audio signals on/off

In stand-by mode, a long press on the Mute button switches audible signals on/off. The "Audio signals off" icon indicates a completely silenced handset.

A short press on the Mute button before answering a call silences the ring signal.

Mute the microphone during a call

A press on the Mute button during a call switches the microphone on/off. The text "Muted" is shown in the display when the microphone is off.

Change the volume during a call

Press the Volume button upwards to increase the volume, downwards to decrease the volume.

Lock/Unlock the keypad manually

Press the *-key and then press "Lock" or "Unlock" to lock/unlock the handset.

Charge the battery

Charging the battery is done in a desktop charger or in a wall mounted charging rack. A filled "Battery" icon indicates a fully charged battery. While in a desktop charger, the handset is fully operational.

- 6 **Note:** Do not charge in a temperature below +5°C.



Communications ♦ Life Safety ♦ Security

Call Toll Free:
1(800)695-2883

Inquiries:
info@aatel.com

www.aatel.com

e-CONNECT Resource Centre

Messages

GB

Receive a message

When a text message is received, the LED starts flashing accompanied with a ring signal and/or vibrating. If the message is received during a call, the user is notified by a beep.

Read/Delete a stored message

To read, open the message list either from the menu, or by pressing the Navigation key \blacktriangle . Select the message from the list and press "Open".

To delete, open the message and press "Delete"; the question "Delete message?" is shown. Press "Yes".

Dial a number included in a message

Open the message and press \odot to dial the first number in the message. If the message contains a scrollable list, select an item and press \odot .

Send message

From the menu, select "Messages". Mark and select "Send Message". Enter the number and press "OK". Enter the message and press "Send".

Alarm functions

Personal alarm*

Press the red Alarm button twice within 2 seconds. "Personal alarm" is displayed.

Test alarm*

Press and hold the red Alarm button until "Test alarm" is displayed.

** The alarm text is configurable and can differ from default.*

Activate/Deactivate alarms


From the menu, select "Settings". Mark and select "Alarm settings". Select "No-movement" or "Man-down" and press "Change"; the checkbox is selected/cleared.

Hot keys/Soft keys can also be reserved for activation/deactivation of alarms.


Menu

For descriptions of all functions, see *User Manual, Ascom i75 VoWiFi Handset*.




Menu icons

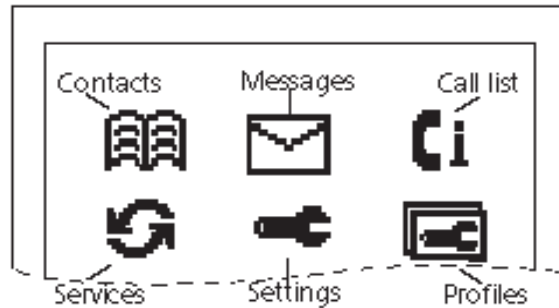

Navigate the menu

In stand-by mode, press "Menu" to enter the menu. Use the Navigation key to move around in the menu structure. The three Soft keys below the display are used for choices in the menu. The function of each Soft key is explained by text in the Soft key field in the display. Press the  key to return to stand-by mode.

Use the local phonebook

Find a name: Select "Contacts" and mark "Local phonebook". Then either press "Select" and scroll the list by pressing the Navigation key  to find the entry, or press "Search" and enter the first letter(s) or the whole name. Press "Search" again; name and number in the first matching entry is shown. You can step to the next entry by pressing the Navigation key . Press  to make the call.

Add an entry: Enter the local phonebook, and press "Add". If one or more contacts already have been added, you will have to press "Options" first, then mark "Add" and press "Select". Enter name and number, and press "Save".

Edit an entry: Enter the local phonebook and mark the entry. Press "Details" and then press "Edit". Make your changes and press "Save".

Delete an entry: Mark the name and press "Options". Mark the "Delete" option and press "Select"; the question "Delete entry?" is shown. Press "Yes".



Communications ♦ Life Safety ♦ Security

Call Toll Free:
1(800)695-2883

Inquiries:
info@aatel.com



www.aatel.com

e-CONNECT Resource Centre

GB

Search in the central phonebook

Select "Contacts", mark "Central phonebook" and press "Search". Enter the first letter(s) in the first name, a space and the first letter(s) in the surname. Press "Search".

The Central phonebook will be searched and a list of matching names will be displayed. You can step to the next entry in alphabetical order by pressing the Navigation key . Press  to make the call.

Soft keys and Hot keys


The three Soft keys below the display can be defined for specific functions such as dialling a specific number, etc.


A Hot key can have the same function as a Soft key and any key "0"–"9" can be programmed as a Hot key.

Turn the automatic keypad lock on/off

Select "Settings", mark "General" and press "Select". Mark "Auto Key Lock" and press "Change"; the Auto lock checkbox is selected/cleared. The "Locked keypad" icon indicates a locked keypad.

Switch the handset off/on

Switch off: Press and hold the  key until "Switch off" is shown. Press "Select".

Switch on: Press and hold the  key.



Communications ♦ Life Safety ♦ Security

Call Toll Free:
1(800)695-2883

Inquiries:
info@aatel.com

www.aatel.com

e-CONNECT Resource Centre

Safety instructions

This product shall only be used with the following batteries:

P/N:660105	Battery Standard
P/N:660106	Battery Extended
P/N:660107	Battery Medic Standard
P/N:660108	Battery Medic Extended

Desktop chargers shall only be connected with power adapters supplied by the manufacturer.

Available power adapters are:

P/N: FW7650	Power supply univ. AC/5V DC/1A
-------------	--------------------------------



Communications ♦ Life Safety ♦ Security

Call Toll Free:
1(800)695-2883

Inquiries:
info@aatel.com

www.aatel.com

e-CONNECT Resource Centre

Regulatory compliance statements

GB

Compliance statement for USA:

This product complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Any modifications made to this device that is not approved by the supplier may void the authority granted to the user by FCC to operate the equipment.

Compliance statement for Canada:

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la Classe B conforme à la norme NMB-003 du Canada.

This device is certified to the requirements of RSS-210 for 2.4 GHz spread spectrum devices. The use of this device in a system operating outdoors may require the user to obtain a licence for the system.

Compliance Statement for EU&EFTA:

The equipment is in compliance with the essential requirements and other relevant provisions of the R&TTE Directive 1999/5/EC.

The declaration of conformity may be consulted at http://www.ascom.com/ws/products_ws.htm.

This equipment is intended to be used in the whole EU/EFTA.



Communications ♦ Life Safety ♦ Security

Head Office: 413 Victoria Ave N., Hamilton, ON L8L 8G4
T: (800)695-2883 F: (905)523-4209